




# Assembly Instructions

## *Raised Vegetable Gardens*


### *Wildlife Covers*

These instruction cover these models...


SKU 34721  
4x4 Wildlife Cover

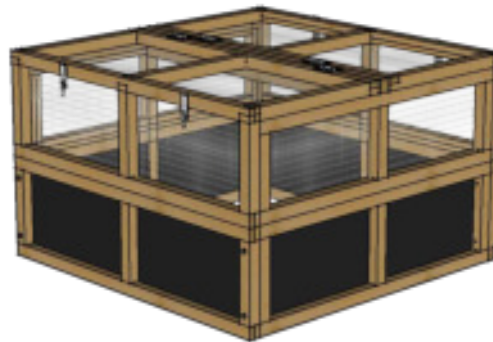


SKU 34722  
4x4 Wildlife Cover

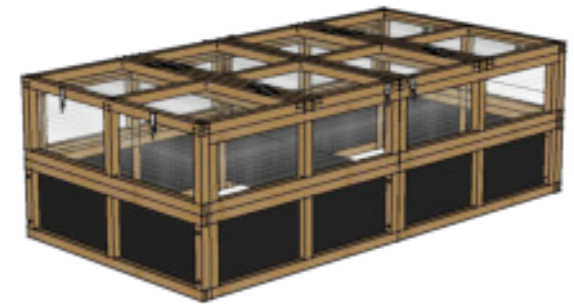

SKU 32421  
2x4 Wildlife Cover

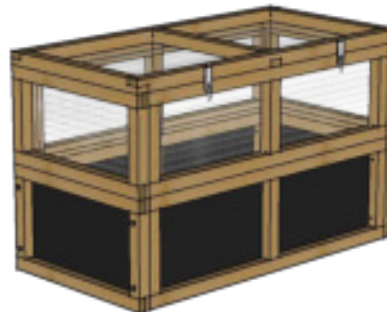

SKU 32422  
2x8 Wildlife Cover

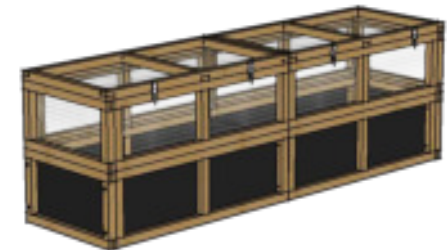

These written instructions, as provided with your purchase, will always be the latest iteration of the instructions and match the product shipped and provide the most complete up-to-date information.


**Note:** Wildlife Covers are an optional add-on product to a Raised Vegetable Garden base... which are sold separately.



Your Drill




Provided  
Bit Holder

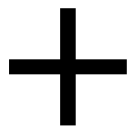

Provided  
T-25 Bit



Provided T-25 3"  
Ceramic Coated Wood Screws

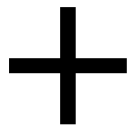

Provided  
#2 Phillips Bit



Provided Exterior Grade  
Hinge & Hasp Screws



Pan head screws are provided  
if you ordered a tall cover.

## Before You Get Started...

Look For This  
Note Symbol



**Green arrows indicate the placement of a brown screw in the indicated direction. Use of the provided pilot bit is recommended to make a pre-drilled hole.**





Provided  
Pre-Drill Bit



**Brown 3D imaged screws are also used to indicate a screw in a pre-drilled hole...**




Make all edges  
flush during  
assembly unless  
otherwise noted.

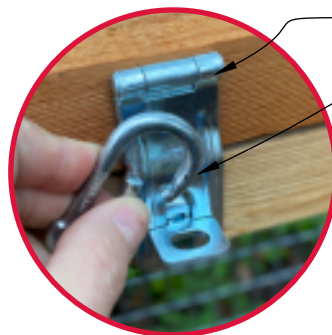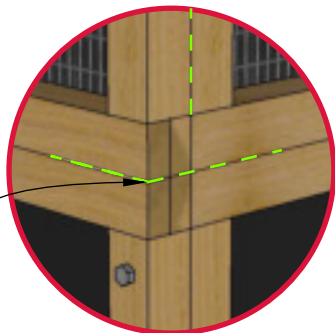

Provided Safety Hasps

Provided Latching  
Clips

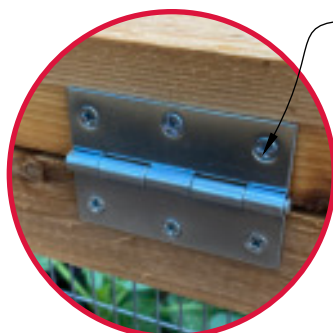

Provided Hinges  
And Screws

**roost&root**  
FIND YOUR INNER FARMER

**Assembly**  
RVG Wildlife Covers  
V1- Model 4 | Feb 2020

Copyright © Endure Product, LLC... all rights reserved.

**Need to Know**



3

Attach 2 hinges as shown using Phillips screws in pre-drilled holes.

1


Attach ends (with pre-drilled holes) to sides as illustrated, using brown T-25 Screws. Ends are same.

Locking Hasps On Front

Hinges On Back

Wire side facing inward on all panels.

Top screws into pre-drilled holes.

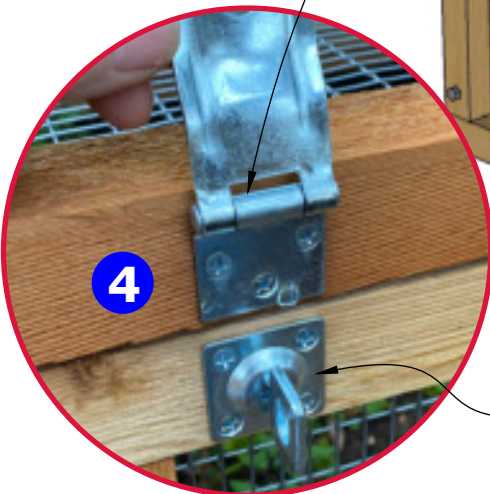

4

2

Attach Assembled Cover Using Brown Screws making All Edges Flush

You will position bottom receiver to where it works smoothly with top hasp and attach using provided screws. Use provided spring clip or your padlock to secure.

Already Assembled RVG Base (Sold Separately)



Provided T-25 3" Ceramic Coated Wood Screws

roost&root  
FIND YOUR INNER FARMER

**Assembly**  
RVG Wildlife Covers  
V1- Model 4 | Feb 2020

Copyright © Endure Product, LLC... all rights reserved.

24" Single Section Standard  
Height Wildlife Cover





4

Attach 4 hinges as shown using Phillips screws in pre-drilled holes.

1

Attach ends (with pre-drilled holes) to sides as illustrated, using brown T-25 Screws. Ends are same.

2


1/16 Thick Black Plastic Spacer Between Side Panels With Brown Screws

Locking Hasps On Front

Hinges On Back

Wire side facing inward on all panels.

Top screws into pre-drilled holes.

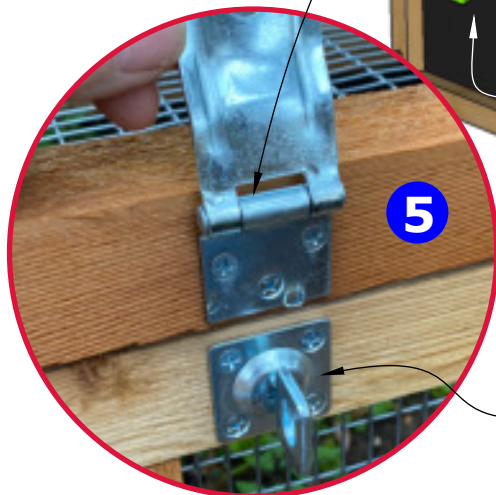


5

Attach Assembled Cover Using Brown Screws Making All Edges Flush

3

You will position bottom receiver to where it works smoothly with top hasp and attach using provided screws. Use provided spring clip or your padlock to secure.

Already Assembled 2 Section RVG Base (Sold Separately)

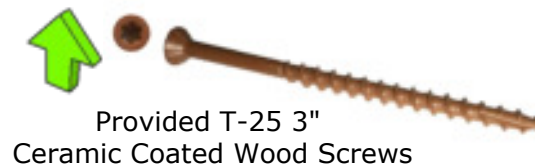

Provided T-25 3" Ceramic Coated Wood Screws

roost&root  
FIND YOUR INNER FARMER

Assembly  
RVG Wildlife Covers  
V1- Model 4 | Feb 2020

Copyright © Endure Product, LLC... all rights reserved.

24" Double Section Standard  
Height Wildlife Cover





4

Attach 4 hinges as shown using Phillips screws in pre-drilled holes.

Hinges On Top

Attach middle hinge support board as shown.

3

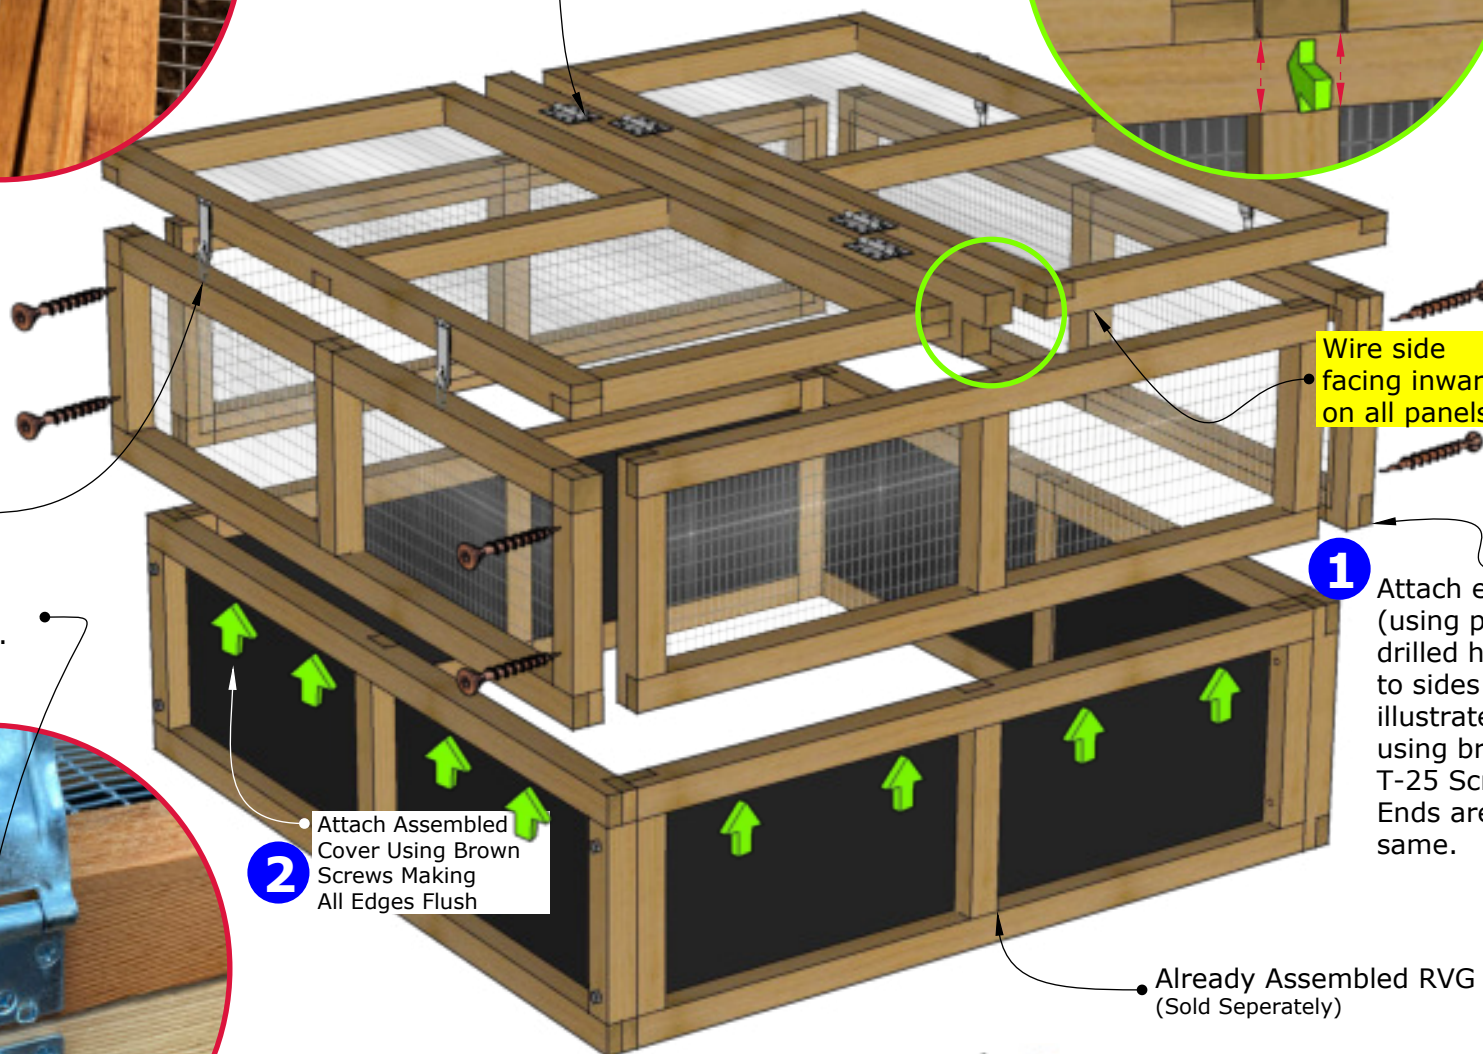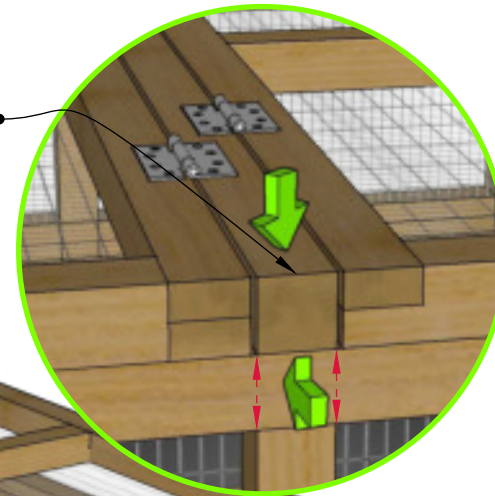

Wire side facing inward on all panels.

1


Attach ends (using pre-drilled holes) to sides as illustrated using brown T-25 Screws. Ends are same.

2

Attach Assembled Cover Using Brown Screws Making All Edges Flush

Locking Hasps On Outsides

Top screws into pre-drilled holes.

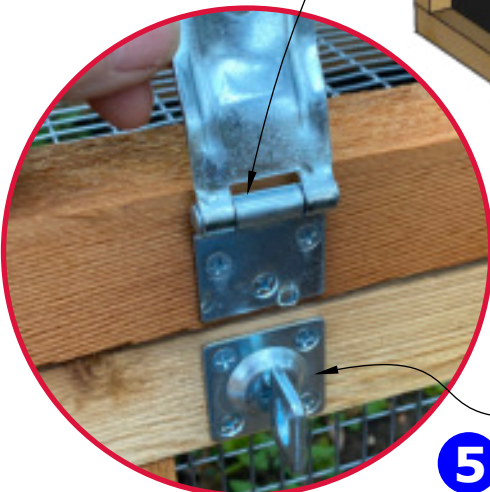

5

You will position bottom receiver to where it works smoothly with top hasp and attach using provided screws. Use provided spring clip or your padlock to secure.

Already Assembled RVG Base (Sold Separately)



roost&root  
FIND YOUR INNER FARMER

Assembly  
RVG Wildlife Covers  
V1- Model 4 | Feb 2020

Copyright © Endure Product, LLC... all rights reserved.

47" Single Section Standard  
Height Wildlife Cover






Attach 4 hinges as shown using Phillips screws in pre-drilled holes.

Attach middle hinge support board as shown.

4

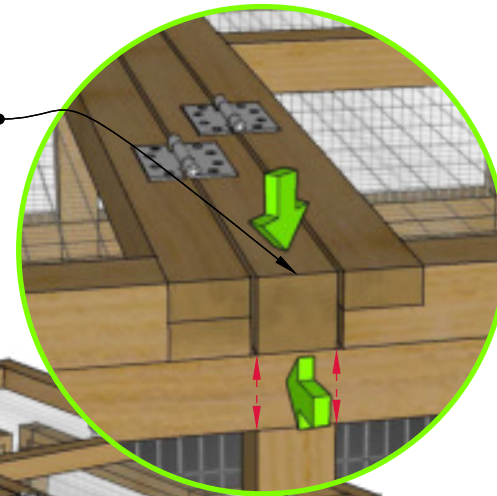

Wire side facing inward on all panels.


2

1/16 Thick Black Plastic Spacer Between Side Panels With Brown Screws

Hinges On Top

Locking Hasps On Outsides

Top screws into pre-drilled holes.

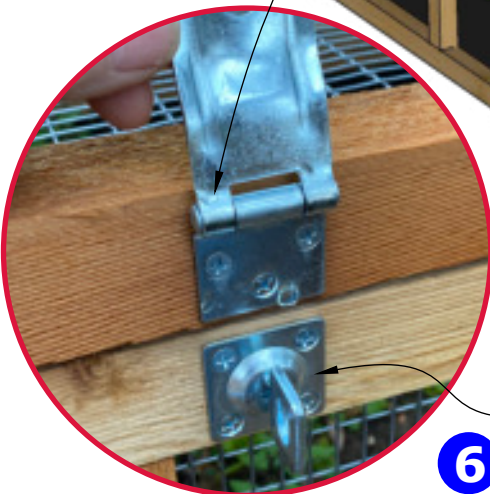

3

Attach Assembled Cover Using Brown Screws Making All Edges Flush.

6

You will position bottom receiver to where it works smoothly with top hasp and attach using provided screws. Use provided spring clip or your padlock to secure.

1 Attach ends (using pre-drilled holes) to sides as illustrated using brown T-25 Screws. Ends are same.

Already Assembled RVG Base (Sold Separately)




roost&root  
FIND YOUR INNER FARMER

Assembly  
RVG Wildlife Covers  
V1- Model 4 | Feb 2020

Copyright © Endure Product, LLC... all rights reserved.


47" Double Section Standard  
Height Wildlife Cover

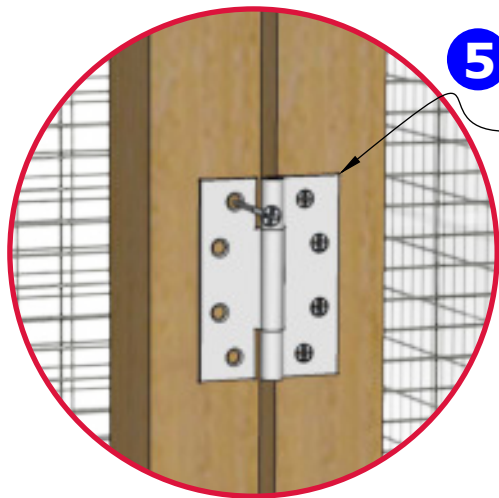

**5**


Door hinge screws on jamb side are pre-installed. Position door in opening and install door side hinge screws...

- 1st - put 1 screw in top hinge and tighten.
- 2nd- put 1 screw in bottom hinge, tighten.
- 3rd - align door in frame
- 4th - install all other screws.

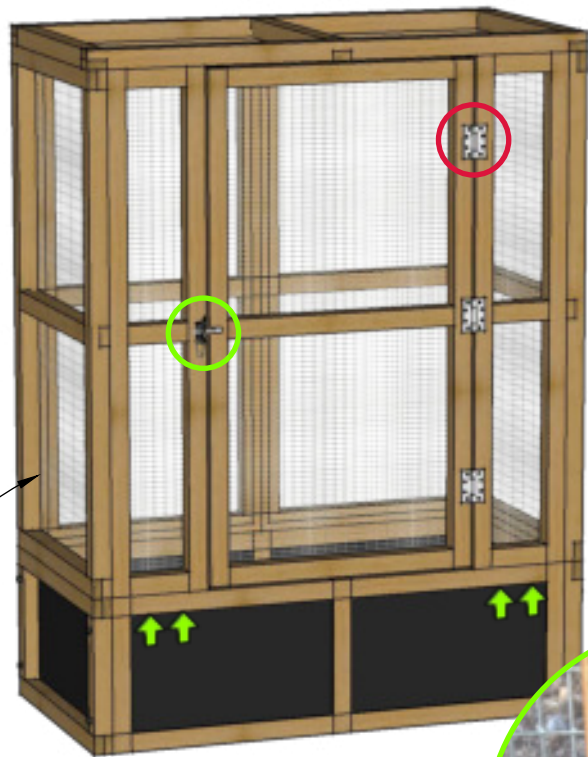

Wire side faces inward on all panels.

Install door latch in position as indicated using pre-drilled holes using provided pan head screws.

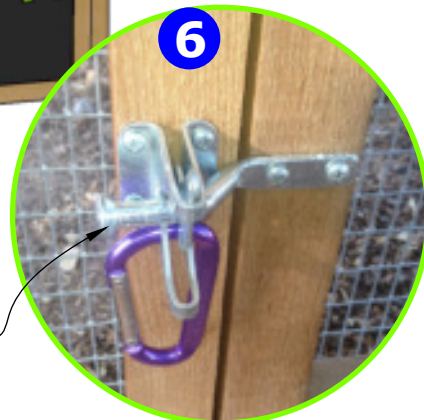

**6**

**1**


Attach ends to front and back sides.

**2**

Attach 2 back panels together

**4**

Attach top making all edges and corners flush. Back edge has holes entire length.

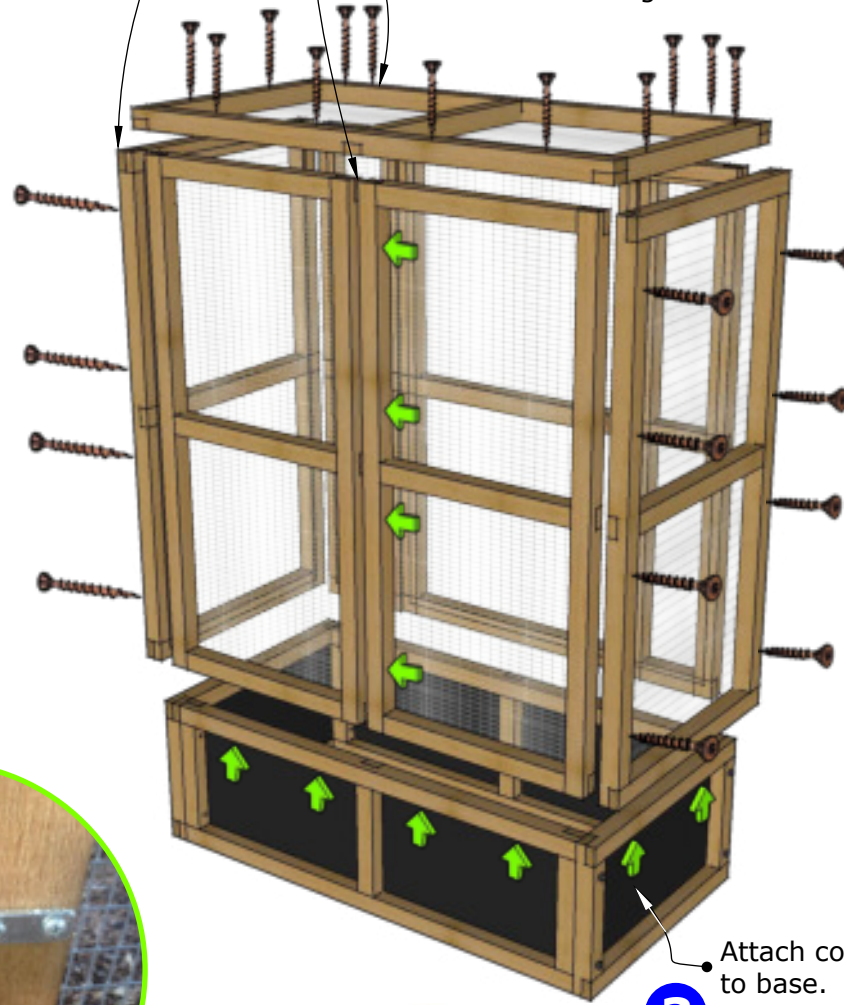

**3**

Attach cover to base.



Provided T-25 3" Ceramic Coated Wood Screws


**roost&root**  
FIND YOUR INNER FARMER

**Assembly**  
RVG Wildlife Covers  
V1- Model 4 | Feb 2020

Copyright © Endure Product, LLC... all rights reserved.

24" Single Section Tall Height  
Wildlife Cover



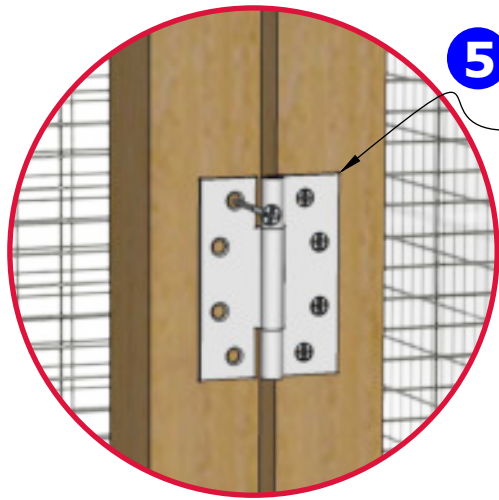

**5**

Door hinge screws on jamb side are pre-installed. Position door in opening and install door side hinge screws...

- 1st - put 1 screw in top hinge and tighten.
- 2nd- put 1 screw in bottom hinge, tighten.
- 3rd - align door in frame
- 4th - install all other screws.



**1**

Attach ends to front and back sides.

**4**


Attach top making all edges and corners flush. Back edge has holes entire length.

**2**


Attach side panels together

**3**


Attach cover to base.

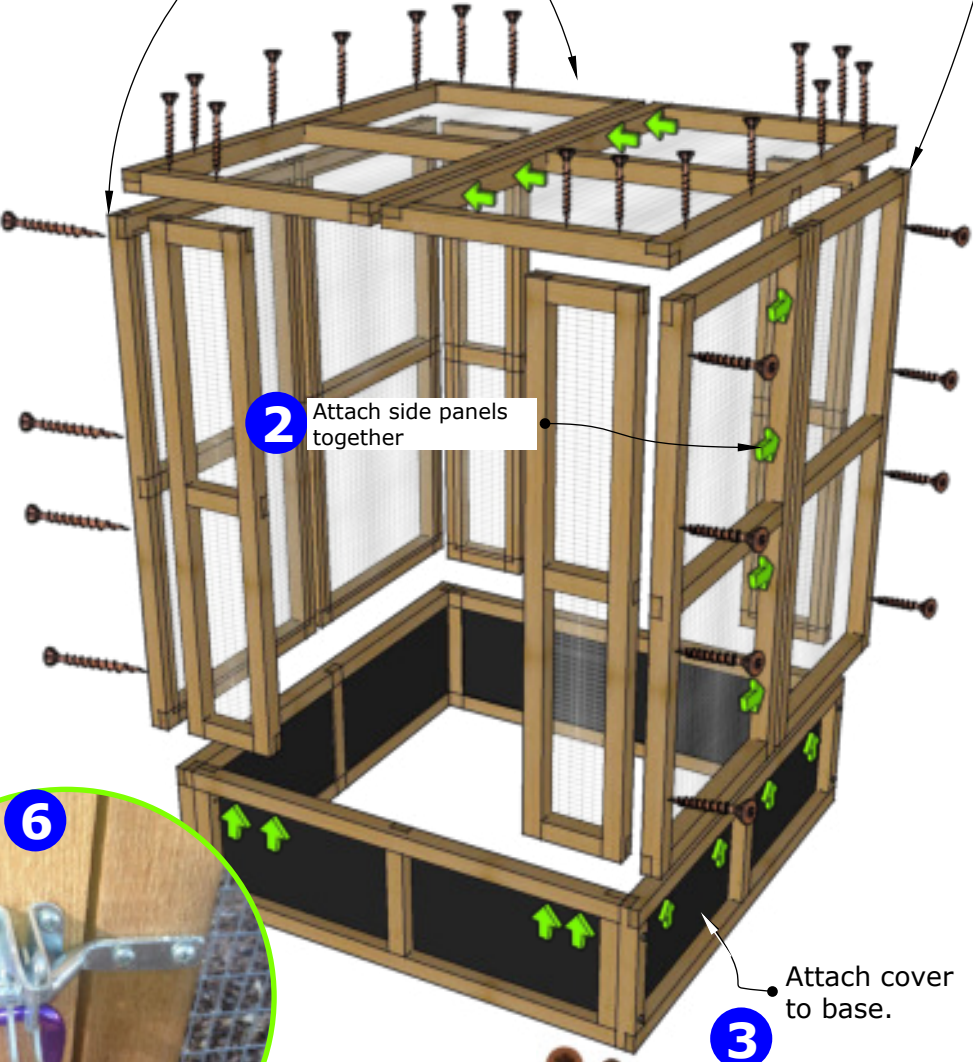

**6**

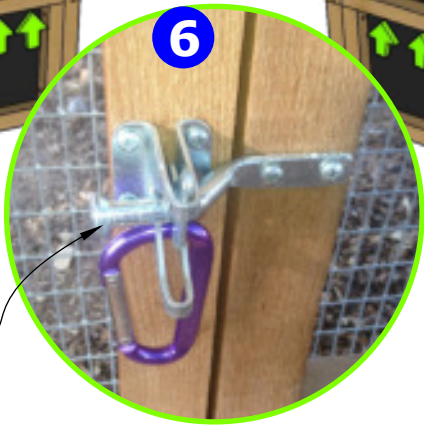

Install door latch in position as indicated using pre-drilled holes using provided pan head screws.

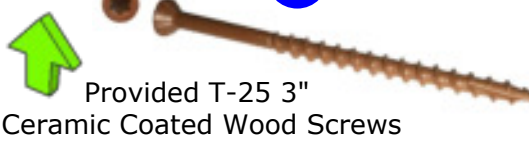

Provided T-25 3" Ceramic Coated Wood Screws

**roost&root**  
FIND YOUR INNER FARMER

**Assembly**  
RVG Wildlife Covers  
V1- Model 4 | Feb 2020

Copyright © Endure Product, LLC... all rights reserved.

47" Single Section Tall Height  
Wildlife Cover

Wire side faces inward on all panels.