



Assembly Instructions


Raised Vegetable Gardens



These written instructions, as provided with your purchase, will always be the latest iteration of the instructions and match the product shipped and provide the most complete up-to-date information.

We depend on feedback about our instructions to implement changes to future versions. Please know that we value your input to that ongoing process and endeavor to produce instructions that are as effective as possible for a wide variety of customers.

4x4 Raised Garden Bed

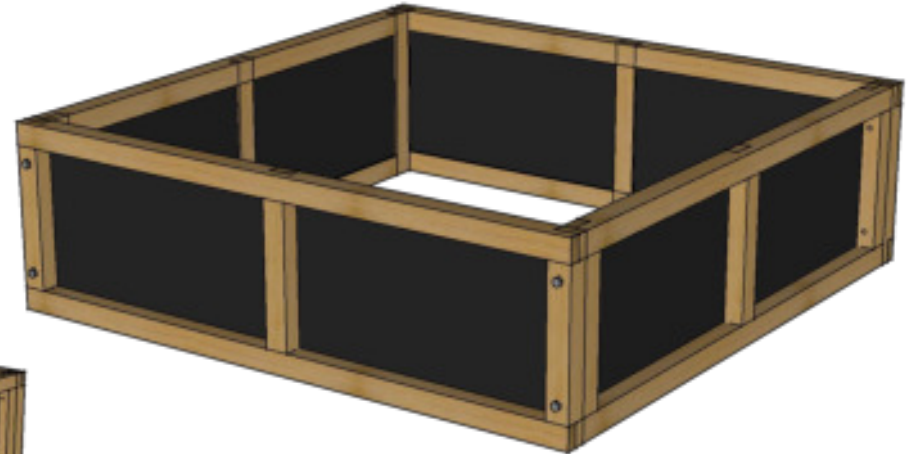

2x4 Raised Garden Bed



2x8 Raised Garden Bed



4x8 Raised Garden Bed



Use your phones camera to read QR Code.
Representation of procedure... not instructions.



See end of instructions for stacking procedure.



Your 1/2" Wrench

or



1/2" Socket

Spiked side towards wood



Provided 5/16 T-Nuts

+

+



Provided 5/16 Washers

+



Provided 5/16 Bolts

Before You Get Started...



Look For This Note Symbol




Gold arrows indicate the placement of a 5/16 bolts, with washer, backed by a t-nut.




Make all edges flush during assembly unless otherwise noted.

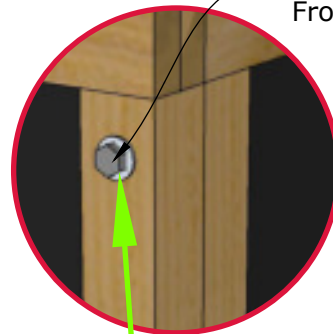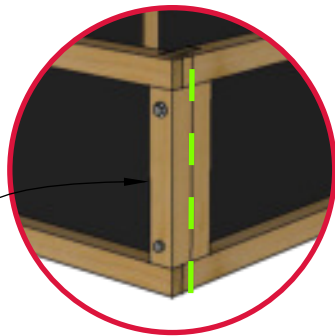


Bolt With Washer Front Side

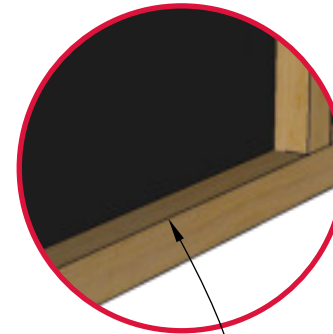


Wide Lip Faces Out

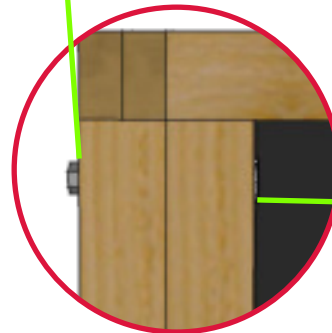

T-Nut Back Side Spikes Towards Wood

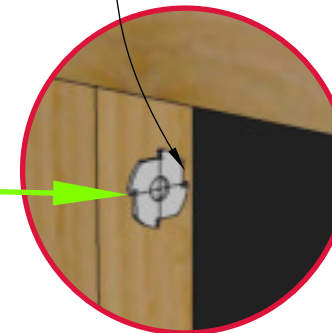


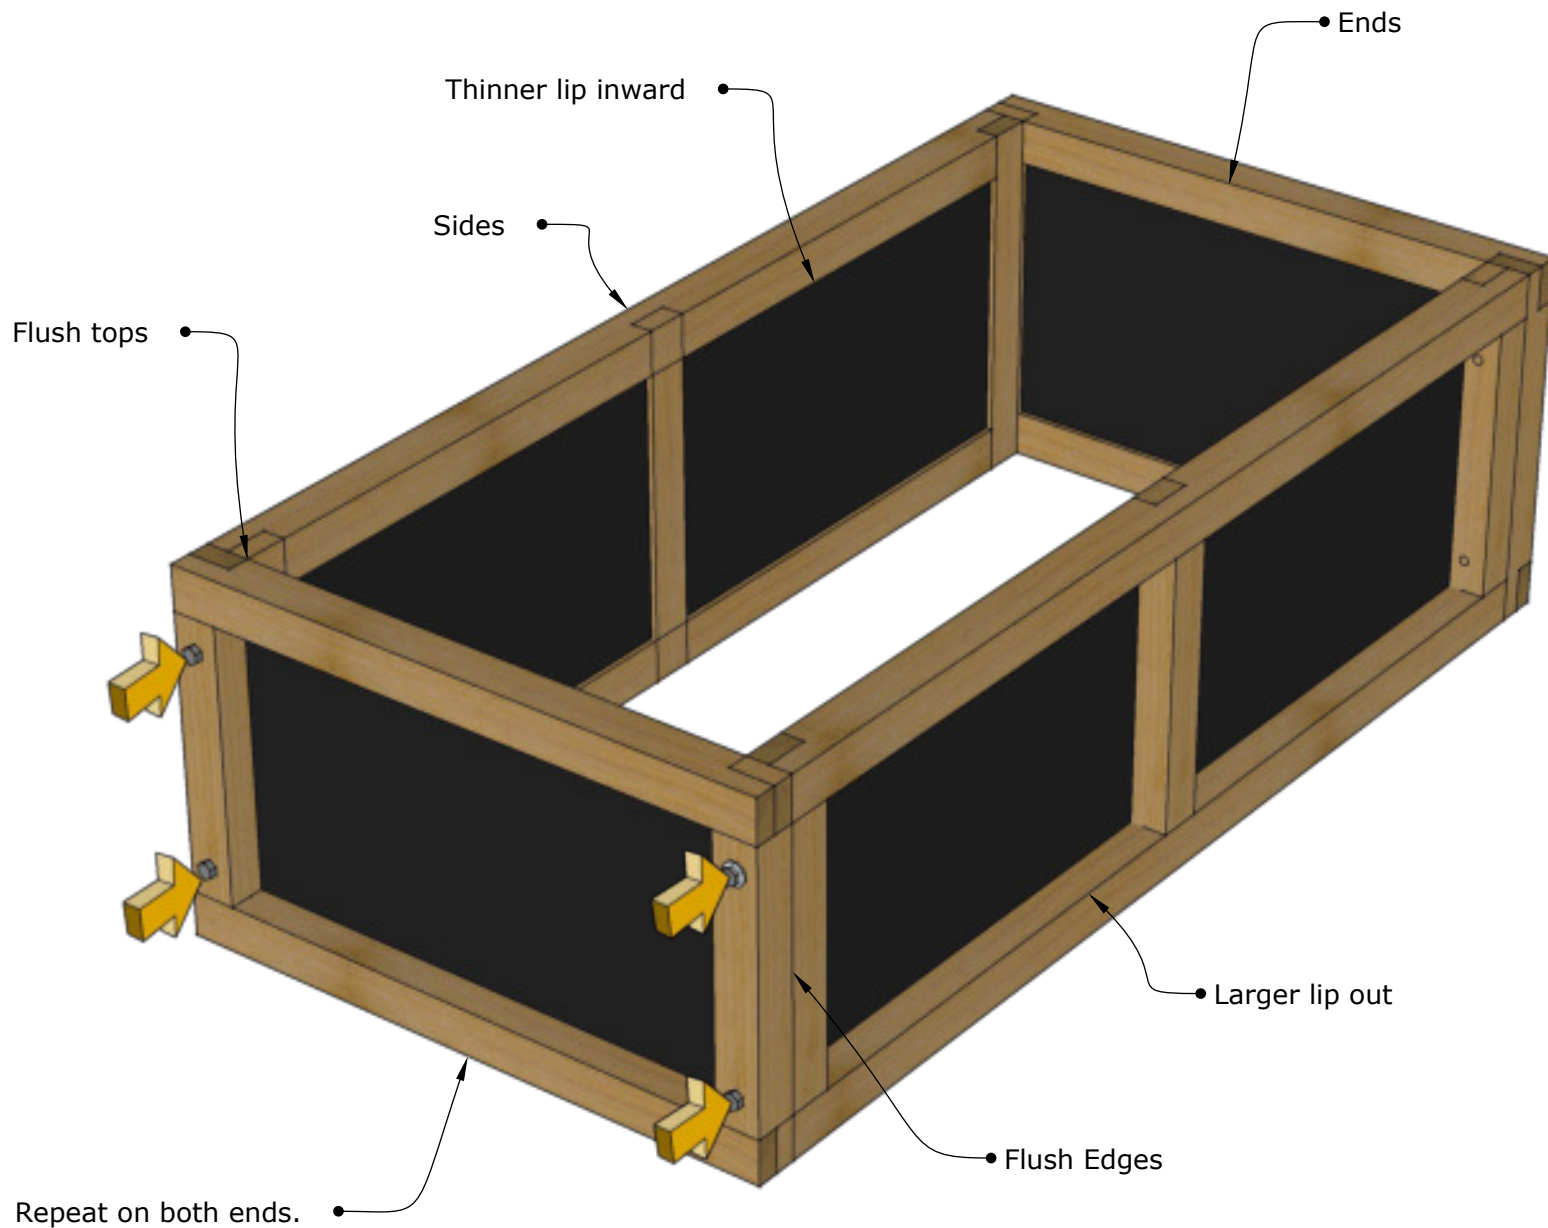

If you're stacking units, build both the lower and the upper unit this same way. See end of these instructions for stacking procedure.

Repeat For Additional Moduels

Sandwich provided mid-support between modules as illustrated for as many modules as you're assembling.

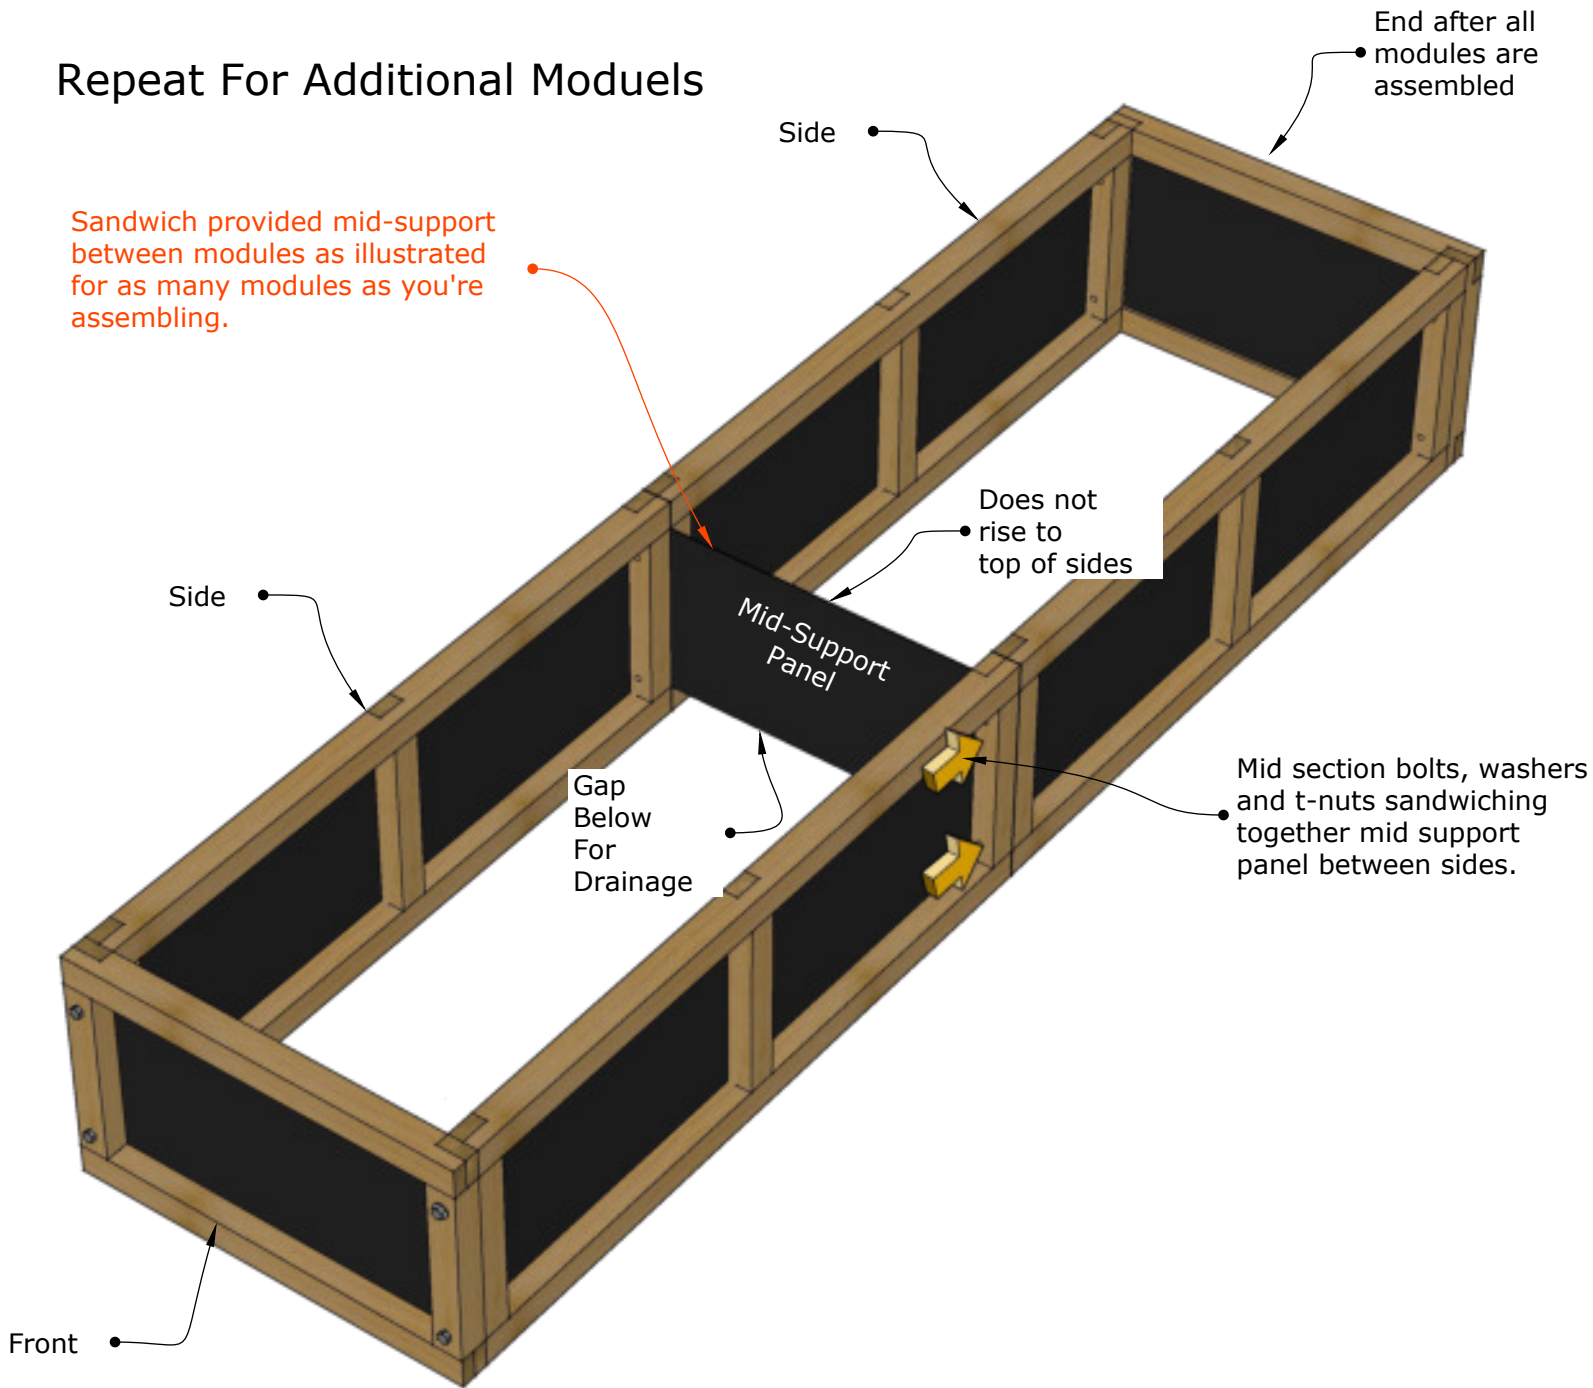


If you're stacking units, build both the lower and the upper unit this same way. See end of these instructions for stacking procedure.

roost&root
FIND YOUR INNER FARMER


Assembly
Raised Vegetable Garden Panels
V4 May 2020

Copyright © Endure Product, LLC... all rights reserved.

Stacking Procedure

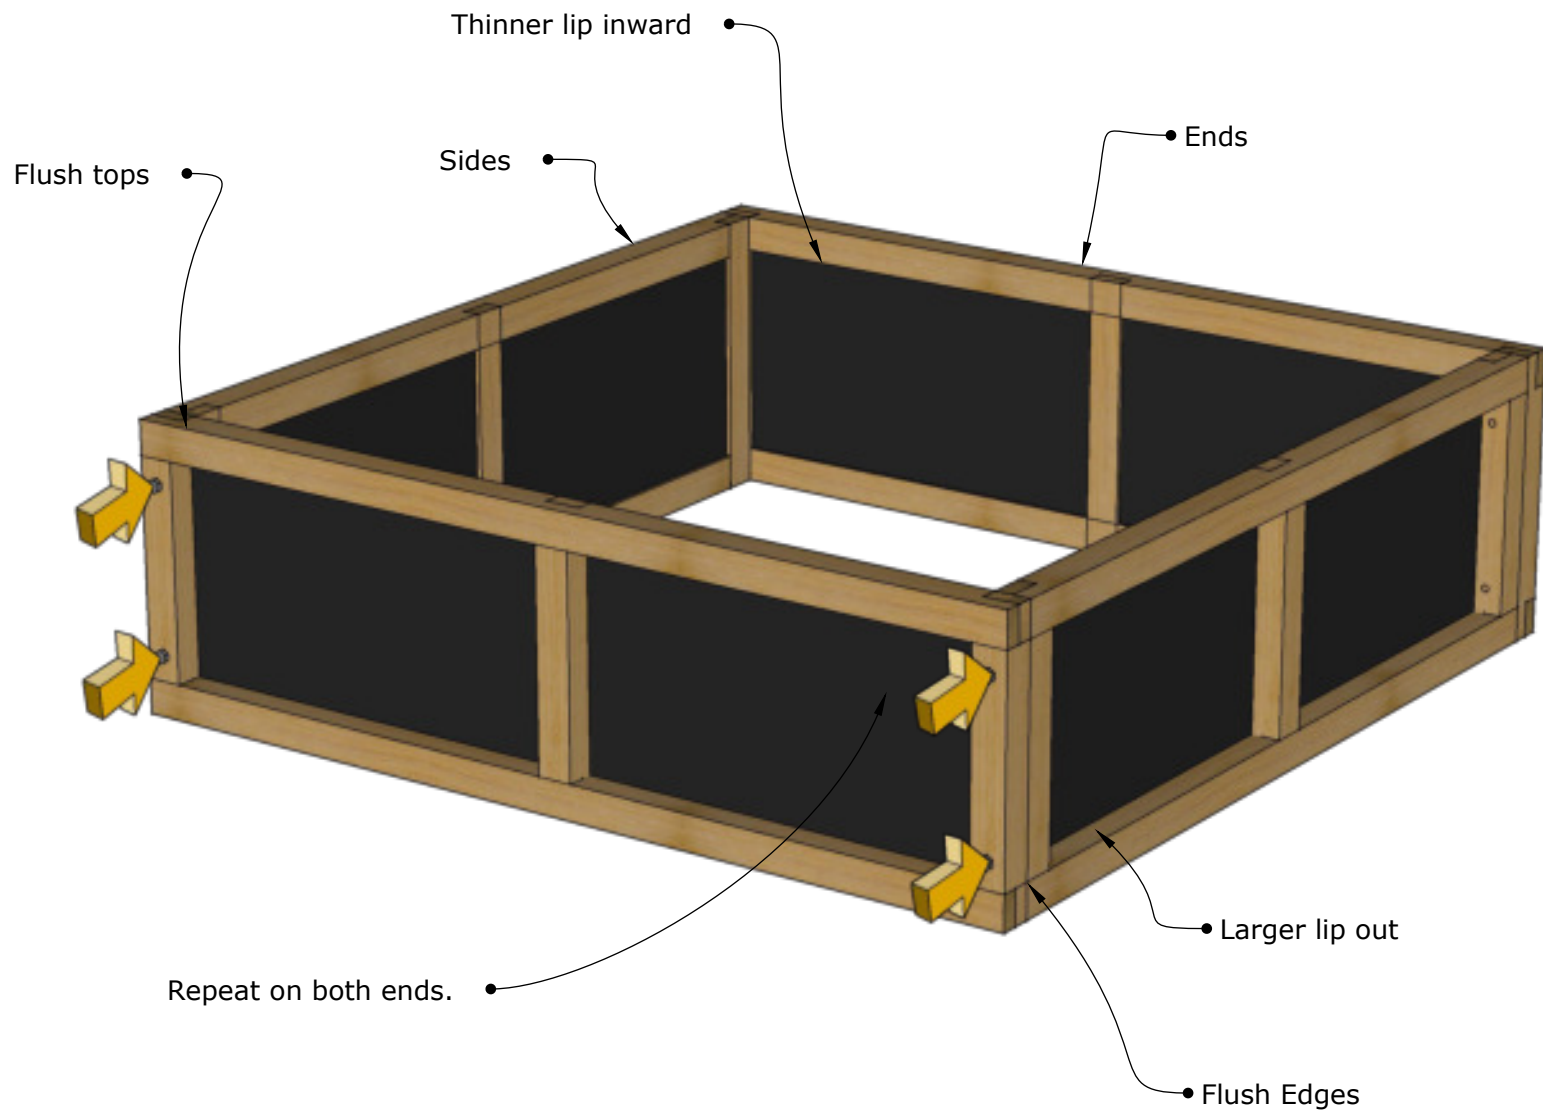

If you're stacking units, build both the lower and the upper unit this same way. See end of these instructions for stacking procedure.

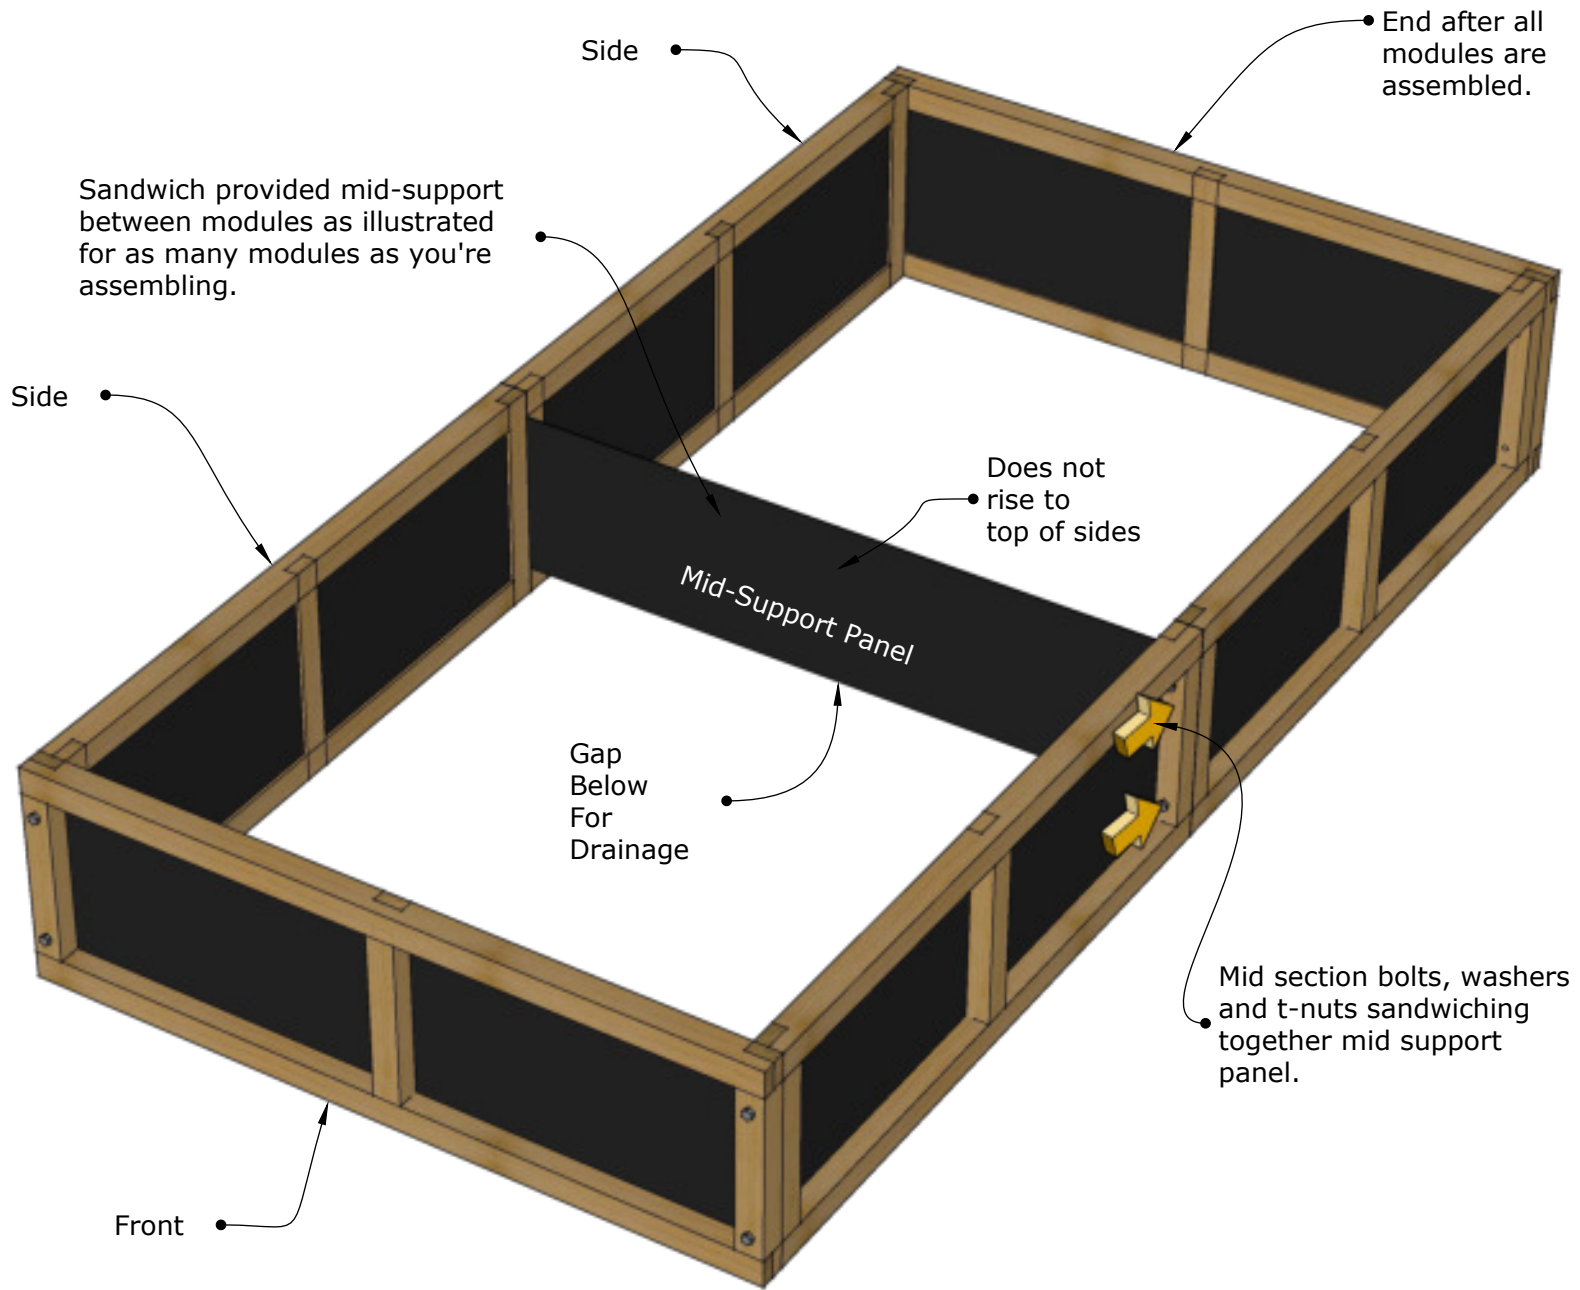



If you're stacking units, build both the lower and the upper unit this same way. See end of these instructions for stacking procedure.



Put in a brown T25 screw as indicated by the grey arrows using the provided T25 bit, bit holder and your cordless drill.

Align sides and preferably drive up in direction indicated from the bottom. This will both make the screw "blind" and not leave a place for water to collect.

If you find it too difficult, you can screw from the top down. Just don't bury the head of the screw too much.

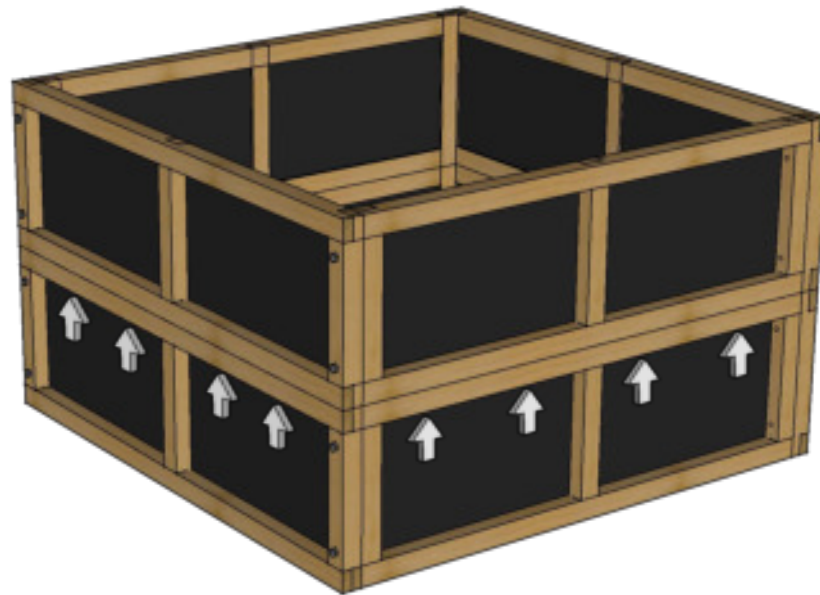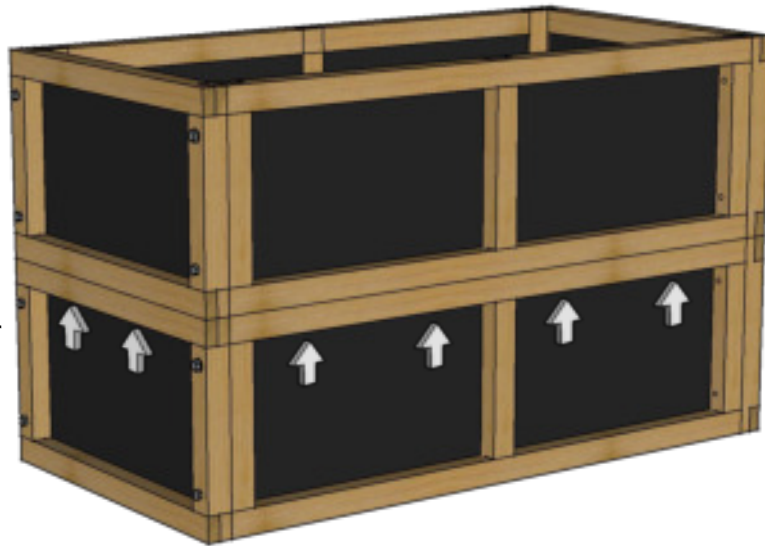

Repeat procedure for all modules that you are stacking.